

Decking Build Instructions

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

For your convenience please check our YouTube channel for assembly videos:

[Please click the link](#)

Also, you check more comprehensive guide on our blog:

[Please click the link](#)

Package contents

- 2x Frame ends
- Frame joists
- 4x Edging
- Decking strips
- Fixings
- Posts


Tools required

- No2 Pozidriv screwdriver (or electric driver)
- Spirit level
- Saw



Positioning Decking Level

Step 1

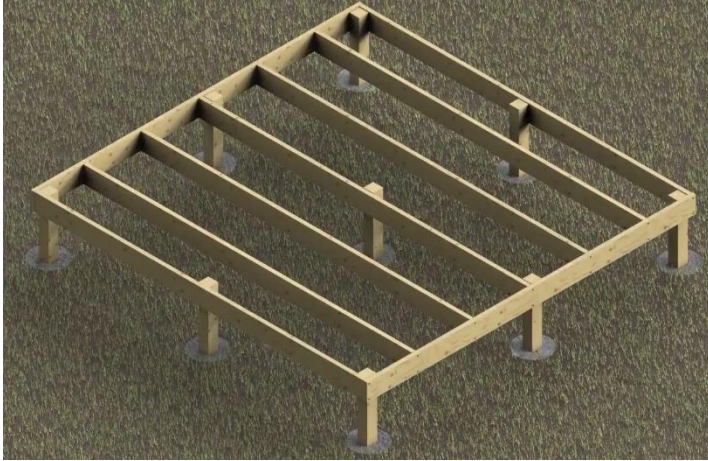

If decking frame supports are used, they can be concreted into the ground as shown.

Step 2




Or used as supports on uneven ground, with the use of slabs to prevent subsidence if necessary. **Important! On both options, the use of a spirit level is essential**, To check that the posts and the frame are still vertically and horizontally.

Step 3



Secure the frame to the posts using the provided wood screws.

Step 4

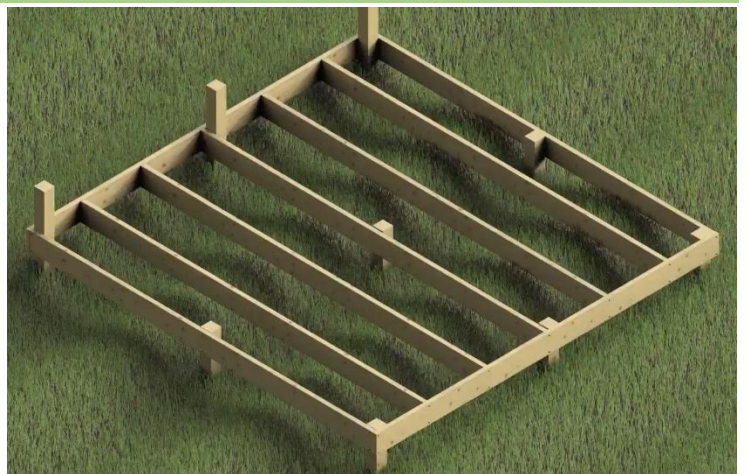

Once the frame is securely attached to the posts and you are satisfied that it is level, cut the post tops off flush with the frame as shown.

Decking Frame Assembly

Step 5



Start the frame assembly by laying out the 2 frame ends of the flat surface using the spirit level to ensure the surface is even.

Step 6




Ensure that the markings on the frame ends are facing inwards and that all the decking rafter slats are evenly spaced out and aligned with all the pencil lines.

Step 7



After all the joists are aligned secure each joist ends with 2x of the provided wood screws.

Step 8

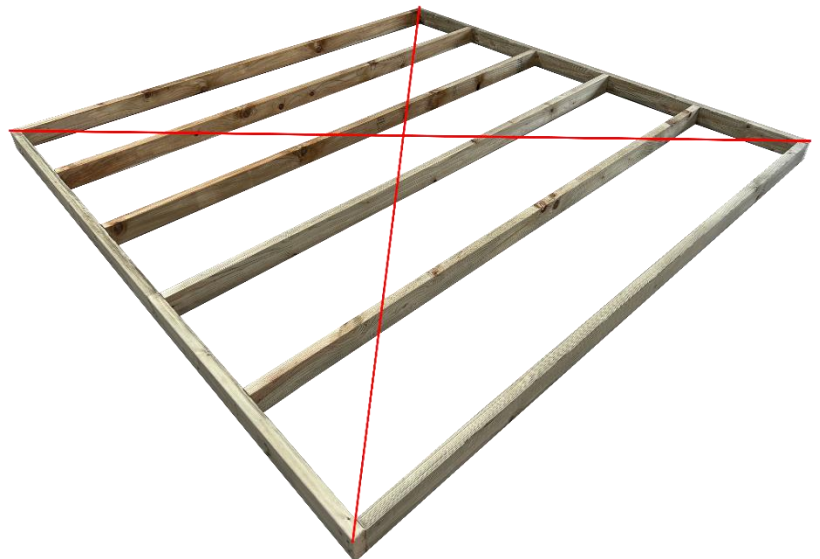

Important: After securing each timber plank with wooden screws, measure the diagonal on both ends so that they would be equal.

Step 9

Lay the decking strips on the frame, running them across the joists. Space them out, **using the provided spacer** so they are evenly distributed and running parallel with one another. Fix each strip into place with 2 x wood screws down both edges and then wherever the decking strip meets a joist.

Step 10

Now attach the Edging strip to each side using 2 x wood screws at each end as shown and then further pairs of screws, evenly spaced along its length.

Your decking kit is now completed!

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via the details above.

Also, you can check our YouTube channel for assembly videos

type in the YouTube search box Arbor Garden Solutions.