

support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Generic build instructions – Workbench with extra shelving

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

You can check our YouTube channel for assembly video.

Please click here

Package contents

1x Table Top

1x Base shelf (for double shelve version 2x)

2x Sets of legs

2x Cover panel (for double shelve version 4x)

2x Back braces

65mm screws

40mm screws

Tools required
Electric screwdriver (No.2 Pozi bit) or
Screwdriver









support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR


Step 1 Step 2.1

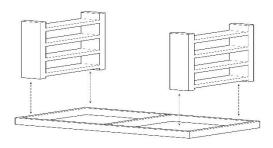

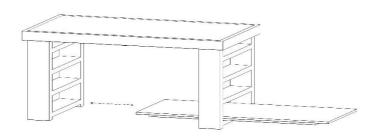

Lay the top upside down and place a leg in position as shown. Ensure the leg is pushed into the corner and secure with the supplied 60mm screws use pre-drilled guide holes.

Fit the bottom shelve into position. Keep the shelve straight, parallel to the table.

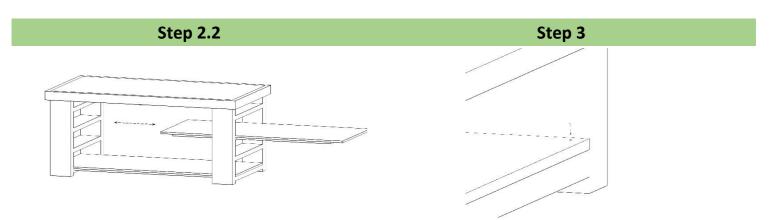

For double shelve variation please slide second shelve into 3rd opening.


Ensure the shelve is lined up with the front of the leg and secure into place with the 40mm screws supplied, use predrilled guide holes.




support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 4.1 Step 4.2

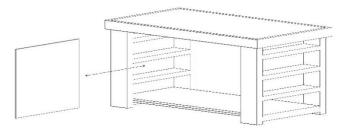


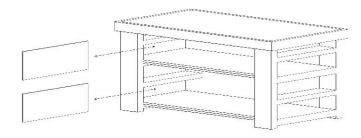

Fit the side panels in position. Centralize and secure with 40mm screws using pre-drilled guide holes.

For double shelve version, fit the side panels into position. Centralize and secure with 40mm screws using pre-drilled guide holes.

Step 5

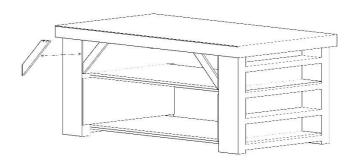

Ensure the brace is pushed flush with tabletop and leg frame and secure into place, repeat this step on the other leg.

Your workbench is now completed!

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via details above.

Also, you can check our **YouTube channel** for assemble videos, click on the link below: https://youtu.be/gKSmXhBvo_oOR

Or

Type in YouTube search box **Arbor Garden Solutions**.