

## **Nanofex Craftsman/Jewellers Workbench**

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary **for your convenience all guide holes are pre-drilled.**

### **Package contents**

1x Tabletop

3x Longer leg panels

1x Back panel

1x Bundle with fixings and necessary panels

Bundle with drawers

1x Support shelf

### **Tools required**

Spanner or battery-operated drill



### Step 1



Take 2x the provided panels just as shown in the picture and secure them with the confirmat screws via pre-drilled pilot holes.

### Step 2



Now take another panel with drawer runners and match the previous one, find the pilot holes and secure the panels with the confirmat screws just as shown in the picture.

### Step 3



Place the support panel at the bottom of the assembled part, align it with the pre-drilled pilot holes and secure it with the confirmat screws.

### Step 4



Take the panel, which has two predrilled holes in the middle. Please attach it to the third runner. You will find pilot holes on the runner. Secure the panel with the confirmat screws.

### Step 5



Place the panel with the runners going from both sides on top of the previous panels aligning the pilot holes. And make that the runners would match with the other panel runners.

### Step 6



Take the second panel, which has runners going from both sides and match the runners with the last panel. Secure the panel via predrilled pilot holes with the confirmat screws.

### Step 7



Now take the same panel as you can see in the picture and secure it with the confirmat screws.


### Step 8



Take the panel as shown in the picture, make sure that the runners are at the same level and secure the panel with confirmat screws.



### Step 9

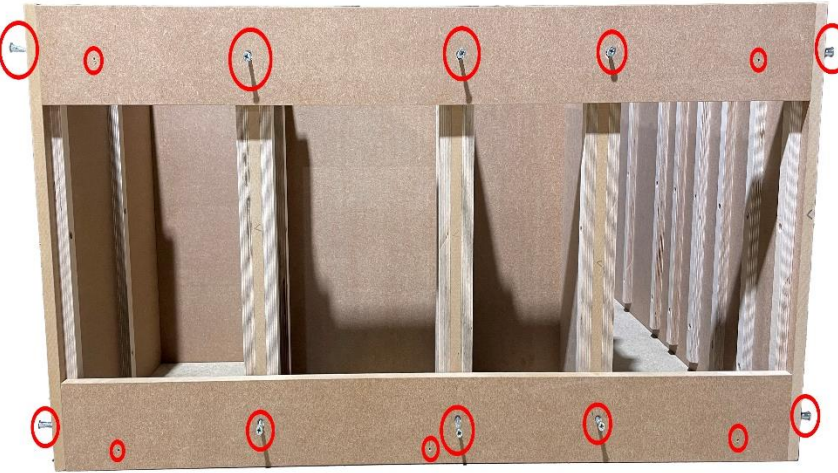


Now place 2x of the longer boards just as shown in the picture and secure it with the confirmat screws. Please note that the bottom board has one pilot hole more than the top one.

### Step 10



At this point, your workbench should look like this.

### Step 11

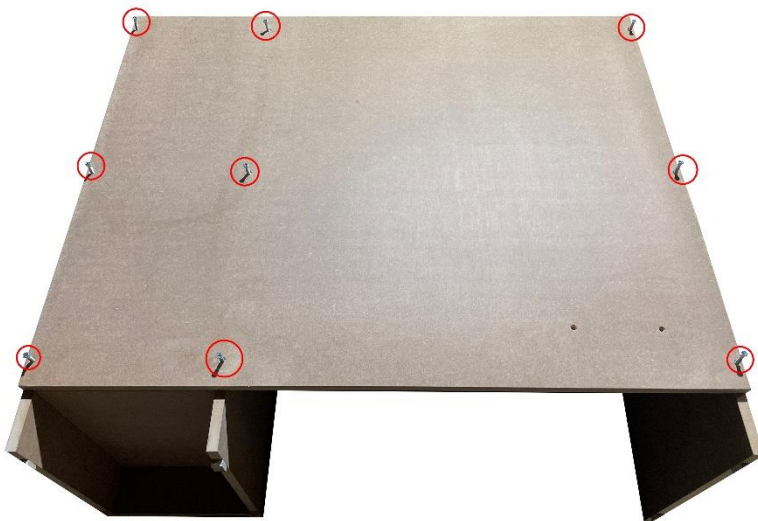

Place the back board on top of the workbench just as shown in the picture and secure it with the confirmat screws.

### Step 12




Flip the workbench on its legs and continue to step 13 to place the worktop.

### Step 13



Safely place the worktop on the workbench just as shown in the picture.

### Step 14

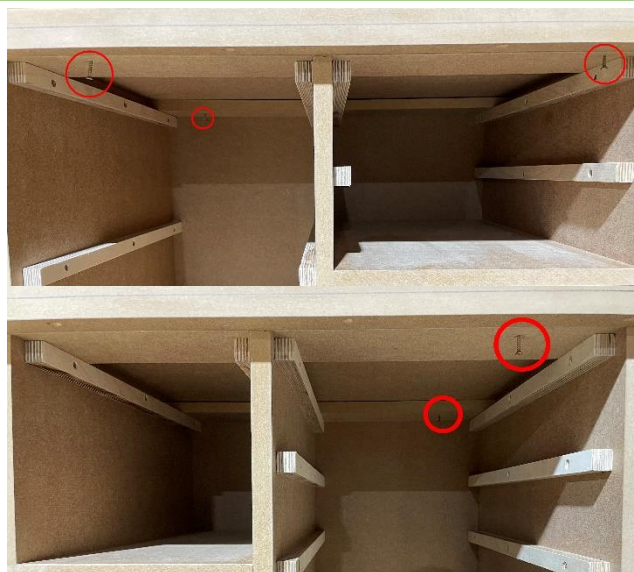


After placing the worktop, please look under the workbench. You will find pre-drilled pilot holes which you need to secure the worktop with the provided screws.

### Step 15



Place the support shelf in the position as shown in the picture and secure it with confirmat screws from the other side. Please continue to step 16 for the drawer assembly.


### Step 16

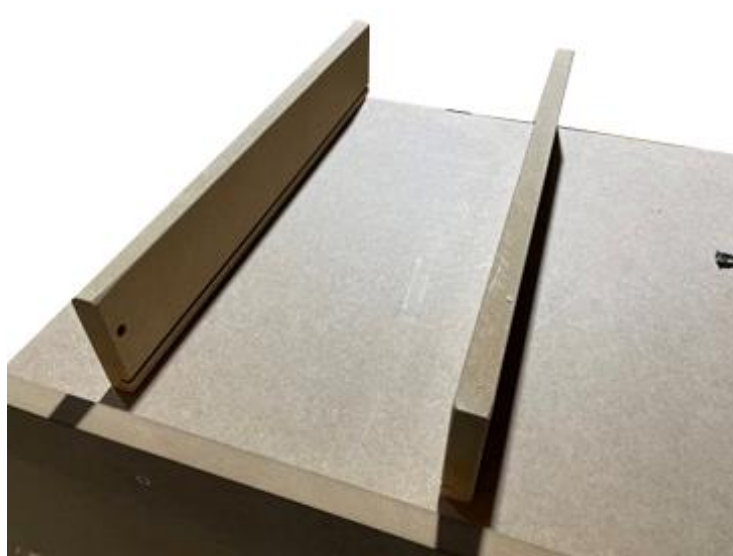

Take two of the provided drawer panels and place them in the same position.



### Step 17

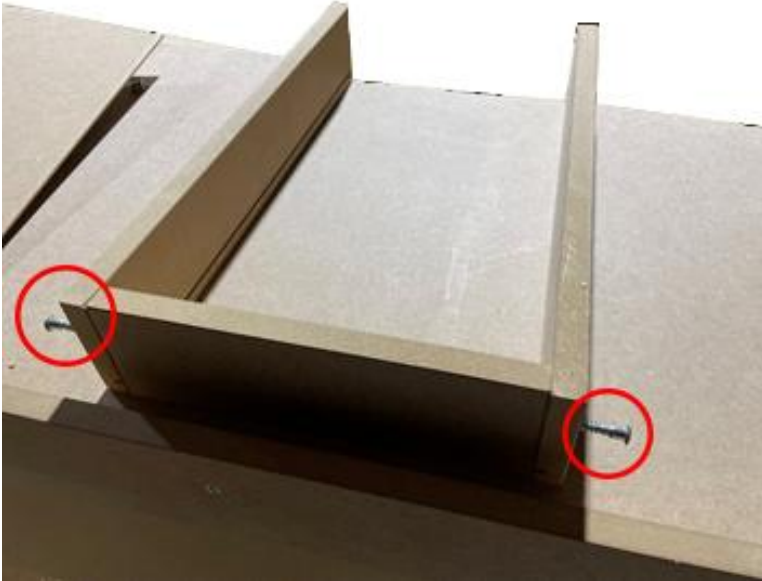

Attach the drawers back panel that the cut out for the board would be facing the same direction. And now secure it with the confirmat screws.

### Step 18



Slide the drawer's baseboard as shown in the picture.

### Step 19



Now place the drawers front panel and secure it with the cam locks from each side. Repeat steps 13 to 16 to finish assembling the drawers.



## **Your Nanofex Craftsman/Jewellers Workbench is now completed!**

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via details above.

Also, you can check our YouTube channel for assemble videos, click on the link below:

<https://www.youtube.com/watch?v= 8KByTFuJm4&t=1s>

Or

Type in YouTube search box Arbor Garden Solutions.