

Nova 2 Door MDF Cupboard 400mm Wide (Nova-AGS2)

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary. **Also, all parts have stickers with part numbers attached and for your convenience all guide holes are pre-drilled.**

Package contents

2x Side panels (Part nr: AGS2_1)
2x Partitions (Part nr: AGS2_2)
1x Base (Part nr: AGS2_3)
1x Back panel (Part nr: AGS2_4)
2x Doors (Part nr: AGS2_5)
4x Shelves (Part nr: AGS2_6)
3x Leg panel (Part nr: AGS2_2)
Bundle with fixings


Tools required

Electric screwdriver
No.2 and No.3 Pozi bits
Phillips Screwdriver
Hammer




Step 1

Lay the side panel (**Part nr: AGS2_1**) on a flat even surface.

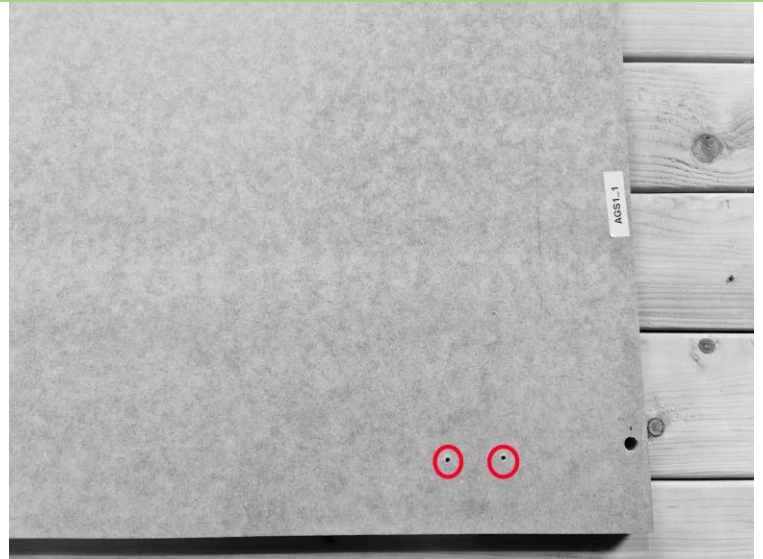Step 2

Take 4 hinge plates and prepare 4x16mm wood screws. Make sure you are using pre-drilled guide holes.

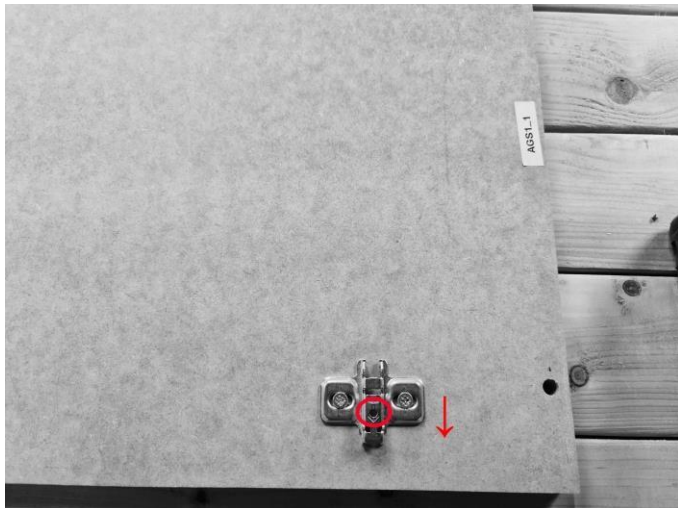Step 2.1

Make sure that a small arrow on hinge plate facing outwards.

Step 3


Repeat steps 2 to 2.1 for the rest of hinge plates.

Step 4



Take base panel (AGS2_3) and align with side panel (AGS2_1) pre-drilled guide holes as shown in step 5.

Step 5

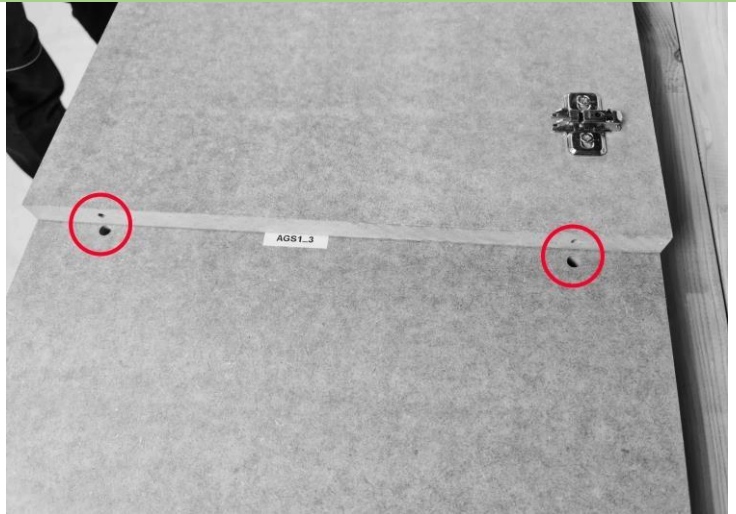

Flip your side panel of the side together with your base panel and secure with confirmat screws as shown in step 5.1

Step 5.1




In this step you might require an assistant, to hold you a side panel.

Step 6




Now, take 2x partition panels (AGS2_2) and proceed to step 7.

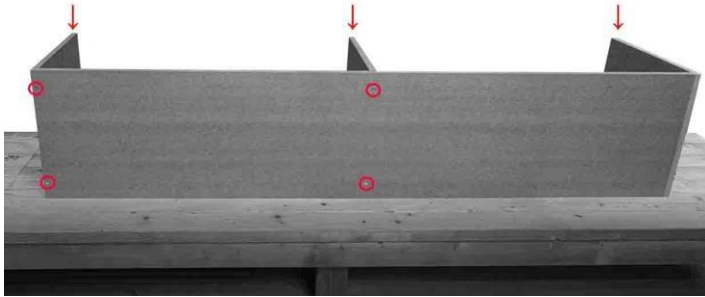Step 7

Align partition panels as shown in the picture and secure via pre-drilled guide holes using confirmat screws.

Step 8

Flip your side panel back to starting position and your cabinet at this stage should look like this.

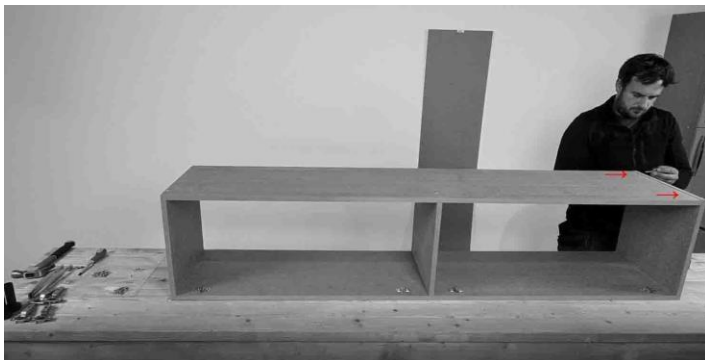Step 9

Take your second side panel (AGS2_1) and secure it via pre-drilled guide holes with confirmat screws. Don't forget to secure base as well.

Step 10

****IMPORTANT****

Now, flip your cabinet as shown in the picture. Make sure that hinge plates are facing down.

****IMPORTANT****

Step 11



Now take your back panel (AGS2_4) and place on top of your cabinet back.

Step 12



Secure back panel with provided nails using hammer. Make sure that nails are spaced out approximately 30mm from each corner.

Step 13




At this stage, take 4 cabinet legs and secure them into place as shown in the picture. These legs are adjustable height 100mm to 130mm. You can adjust them at this stage or later when you will position your cabinet into upright position.

Step 14



Position your cabinet into upright position (make sure you have assistance) and at this stage your item should look like this.

Step 15

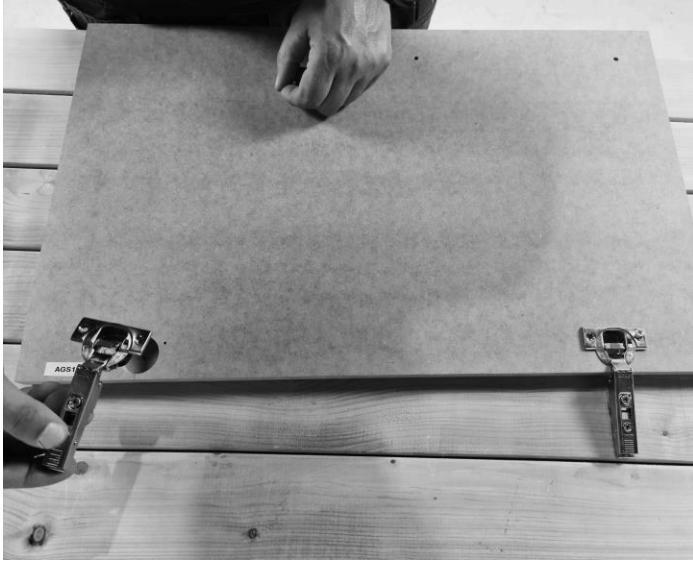

Now take your doors (2x AGS2_5). Place hinges into pre-drilled holes and secure with wood screws 4x16mm.
Repeat this step for all three doors.

Step 16



At this stage, take first door (AGS2_5) and secure it into position as shown in the picture. Then take second door (AGS2_5) and secure into position. ****Important** insert the front of the plate in to front arm of the hinge. Now press back arm of the hinge until you hear the click.**

Step 17



Now, using pre-drilled guide holes secure cabinet handles.

Step 18




At this stage your cabinet should look like this. However, when you install the doors, they may be out of alignment.

Step 19



Start first by adjusting machine screw marked as number one on the arm of the hinge, this will adjust your door left-to-right or horizontal position. If you need to adjust in and out position simple adjust cam-screw marked as number two. To adjust up and down or vertical position, simple release hinge plate.

Step 20

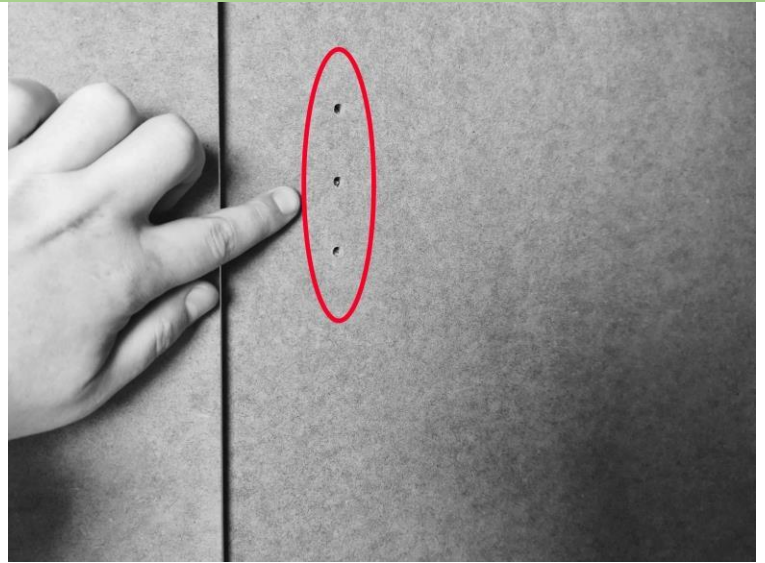

This cupboard has adjustable height shelves.

Step 21




Please use provided pegs to setup your shelf at your required height.

Step 22



Now, fit shelves as shown in the picture.

Step 23

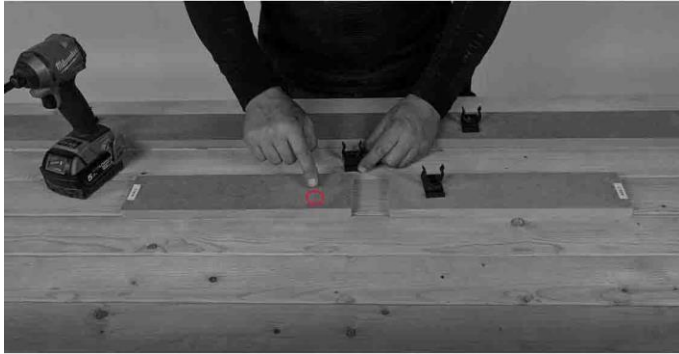

Last step is to cover legs with a panel. Take leg panels (AGS_2) and secure leg supports using pre-drilled guides and wood screws.

Step 24



Take shorter and longer braces and align predrilled guide holes.

Step 23



Secure both panels using confirmat screws. Repeat steps for the other side.

Step 24



Take your finished leg panel and clip it to the legs.

****IMPORTANT****

If you have more than one Nova product, we strongly advise to connect them together via guide holes, which you can find in each side panel corner. Also, please note that cabinets and wall cupboards need fixing to walls conventionally using wall plugs and screws suitable for your wall material. Please employ a tradesman if in doubt.

Step 1



To connect cabinet to other cabinet, use pre-drilled guide holes as shown in the picture. This should be your last step, when you decided about the layout of your Nova Garage Cabinet Systems.

Step 1.1



Your 2 door cabinet is now completed!

We hope that you found your product quick and easy to assemble but if you require further assistance or have any questions you can contact us via details above.