

Screen Double Beam Garden Pergola Kit

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details at the top of the page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

Package contents

2x Posts
2x Runner
4x 700mm Braces
8x Rafters (If bought) + (16x coach bolts + 16x black caps)
Spacer
8x 60mm Screws
12x 80mm Screws

Tools required

Screwdriver (battery operated recommended)
Platform or step ladder



Step 1



Step 2



Take one of the posts and one of the runners and arrange on the floor as shown. Align the post to the marked pencil lines on the runner.


Please note both sides of the runner must have an overhang of 41cm.

Step 3



Secure the runner to the post with the 80mm screws.

Step 4

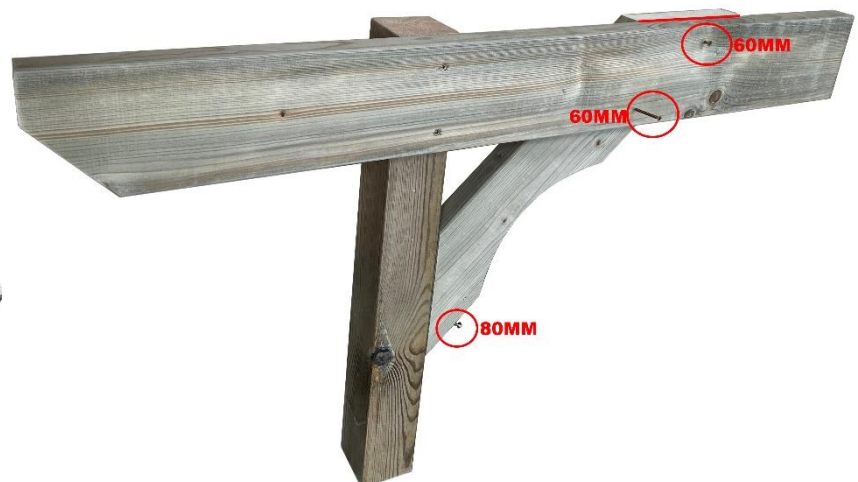

Place the 700mm sculpted brace as shown. Align one of the ends with the post so that its ends are flat and secure it with the 80mm screw. And another side of the brace must be aligned with the top of the runner and secure it with 2x 60mm screws. Repeat steps 1 to 4 for the other side of the pergola.

Step 5



Rotate your assembly and place the second runner in the same manner as the first one aligning both runners and leaving the overhang of 41cm. Secure it with 80mm screws.

Step 6



Take the second brace and attach it in the same manner as the first one making sure that it is properly aligned. If you bought a pergola with rafters, please continue to step 7.

Step 7



Take the rafter who has got 2x of the routed slots and place it just before where the pergola post ends. Secure it with the 100mm coach screws.

Step 8



Please note in your 8x rafter set there will be 2x rafters that will have a bigger routed slot than the rest of the rafters and both will need to be placed as the second rafter from both pergola edges above the braces.

Step 9



Please use the provided spacer and place the second rafter with the bigger routed slot as shown. Secure it with the 100mm Coach bolts. Then use the spacer again and keep adding the rafters in the same manner to finish assembling your pergola.

Your double beam screen pergola is now completed!

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us via the details above.