

## Screen Garden Pergola Kit

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.


We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

### Package contents

**2x Posts**  
**1x Runner**  
**2x 500mm braces**  
**Wood Screws**  
**Spacer**

### Tools required

**Screwdriver (battery operated recommended)**  
**Platform or step ladder**

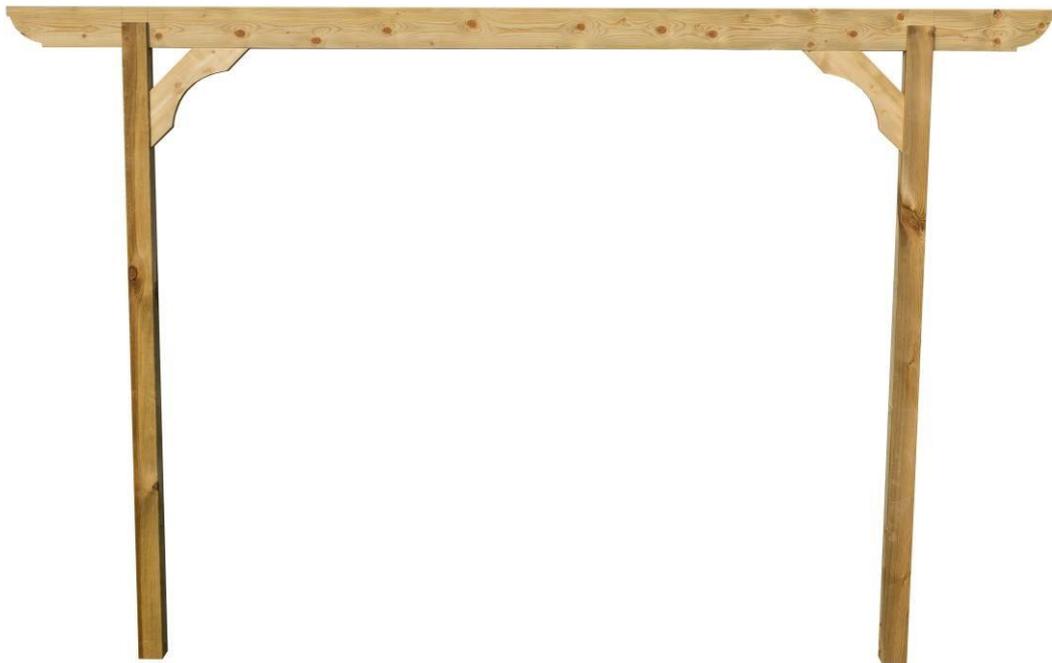

### Step 1



Take one of the posts and one of the runners and arrange on the floor as shown

### Step 2




Now slide one of the runners and secure it with provided screws. **Please note both sides of the runner must have the overhang of 40.5 cm.**

### Step 3



Place 500mm brace (standard or sculpted) as shown, align it so that its ends are flat and central against the runner and post.

### Step 4

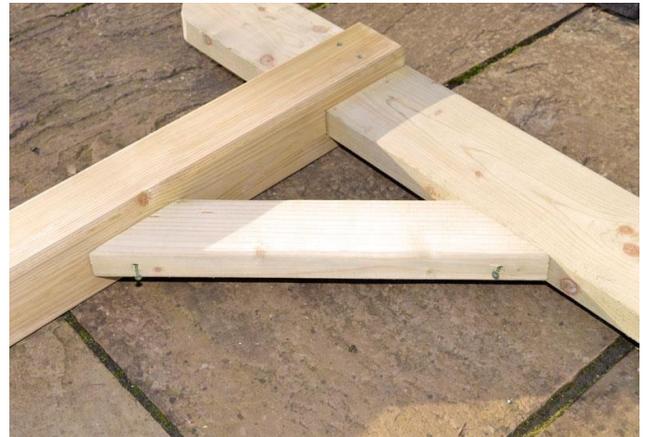

Secure via provided guidelines with wood screws, repeat for the other side as well.

## Step 5



Carefully lift the completed structure into the upright position as shown and position in its final location before securing into place.

### **Your screen pergola is now completed!**

We hope that you found your product quick and easy to assemble but if not and you require any further assistance or have any questions you can contact us via details above.