

Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Open front mobile animal field shelter assembly

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarise yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details at the top of the page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary for your convenience all guide holes are pre-drilled.

Ensure that you have all the correct parts listed on the front page of these instructions, including any fixings.

Press here for the assembly video

Package contents

- 4x slides
- 2x Side panels
- 1x Back panel
- 1x Front panel
- 5x Rafters
- Roof panels
- 4x Feather edge covers
- Necessary screws and fixings

Tools required

Electric screwdriver (No.2 Pozi bit) or Screwdriver.







Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 1 Step 2

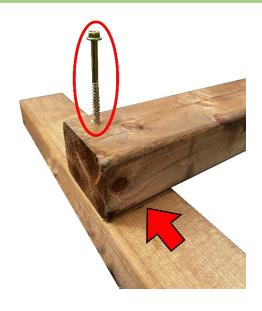

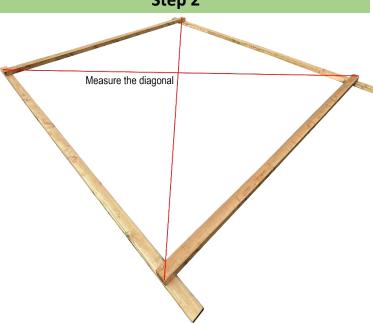

Take two of the smaller slides and place them on two of the longer slides as shown in the picture, before securing it with the coach screw or the metal corner make sure that the shorter slides are properly aligned with the marked line.

After securing all 4x corners measure both diagonals they must be the same length to continue your assembly.

Step 3 Step 4





Before continuing to the main corpus assembly please check the bottom of each board. There you will find protection cubes that save panels from damage while in transit. You need to knock them down before starting further steps of the assembly. Front and rear corpus panels will have kickboards that need to be screwed out before placing the panels on the slides so that the remaining predrilled pilot holes would be visible.



Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 5 Step 6



Fit in the back panel between the slides on the longer side.



Now take 6x80mm wood screws and secure the back panel to the slides as shown in the picture.

Step 7 Step 8





Take the side panel and secure it to the back panel with the 4x80mm wood screws via predrilled pilot holes.

Please make sure before securing any of the panels that everything is perfectly aligned.



Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk


Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 11 Step 12



Place the front panel in the same manner and secure it with the 4x80mm wood screws making sure that everything is aligned.

Take the remaining side panel and secure it from both sides with 8x80mm wood screws.

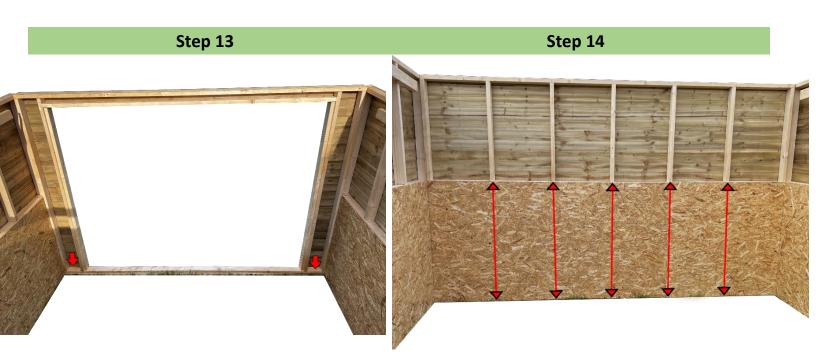

After the main corpus is secured, you can screw the front panel to the slides with the 2x80mm wood screws.


After making sure that all 4x corpus panels are safe and secured with the necessary wood screws you can go and put back the kickboards to their places securing each of the rows (Marked in the picture) with the 25mm wood screws.




Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 15

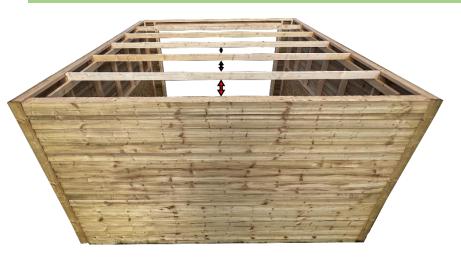

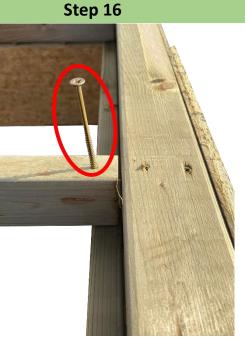

Now place 5x of the rafters in the position as shown making sure that each of them is equally aligned and has same gap between one another. (Use the provided spacer 53cm)

Secure each rafter end with 1x80mm wood screw via predrilled pilot hole as shown in the picture. (2x 80mm wood screws per rafter.)

Step 17 Step 18



Place the roof on top of your assembly leave 5cm from front back and the sticking corner so that everything would spread equally.



Keep putting on the rest of the roof panels making sure that the last roof wave would go underneath the new roof wave so that they could connect and be screwed per one screw. Please use the provided screws to secure the roof to the assembly.




Phone number: 01945 410950 support@arborgardensolutions.co.uk http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 19 Step 20



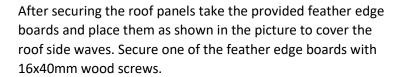



Place the second half of the cover aligning it with the first one. Again, secure it with the 16x40mm wood screws. Complete step 20 on the other side of the shelter as well.

Open front mobile animal field shelter is now completed!

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via the details above.

Also, you can check our **YouTube channel** for assemble videos, click on the link below:

https://www.youtube.com/watch?v=8bMakbbdICw

Or type in YouTube search box Arbor Garden Solutions.