

support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Generic build instructions – Express workbench

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of the page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

Please note: If this product is delivered to you by a Parcelforce, it is split into 2 compartments. If you have received only 1 package, the second package will be delivered to you the following working day.

You can check our **YouTube channel** for assemble videos.

Please type in YouTube search – Express Workmate Please click here

Package contents

1x Tabletop
2x Sets of legs
1x shelf (for double shelve option 2x)
4x braces + fixings

Tools required
Electric screwdriver (No.2 Pozi bit) or
Screwdriver







support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 1 Step 1.1





Lay the leg uprights and brace on the flat surface. (for single shelf version 1x cross brace, for double shelve version 2x cross braces)

Use pencil marks to level your cross brace and secure with 80mm screws. Ask for assistance if needed.
For double shelve option please repeat this step twice.

Step 1.2 Step 2





Now, repeated 1.1 step for the other side.


Now, place tabletop on flat and levelled surface. Place finished legs into place as shown in the picture. Make sure that legs are pushed flush to end and secure using 60mm screw via predrilled guide holes. **Repeat this step on both sides.**



support@arborgardensolutions.co.uk
http://www.arborgardensolutions.co.uk

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

Step 3 Step 4

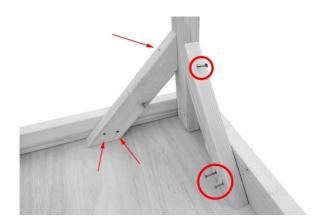



Now, place braces as shown in the picture and secure using 60mm screws via pre-drilled guide holes. Make sure that braces are flush with leg upright and tabletop. **Repeat**this step on both sides.

Place workbench back on its feet. Slide base shelf into position and secure using golden 40mm screws via predrilled guide holes on both sides. If you have double shelve version, repeat this step twice.

Your workbench is now completed!

We hope that you found your product quick and easy to assemble but if not, remember you can always check our YouTube channel for assembly video – just type into YouTube search "Express Workmate" or press on the attached link below:

https://www.youtube.com/watch?v=9xdgDoFiQ2c

Or if you require further assistance or have any questions you can contact us via the details above.