


# Porch Canopy Fitting Instructions

## Kit Contents

- A** 2 x Wall supports 38x89mm / 1200mm long
- B** 2 x Horizontal roof supports 38x63mm / 1800mm long
- C** 2 x Horizontal one end angle cut supports 38x63mm / 622mm long
- D** 2 x Both end angle cut supports 38x63mm / 791mm long
- E** 5 x Angle cut rafters 950mm long
- F** 16 x 80mm Wood screws
- G** 8 x 100mm Wood screws

No fixings are included to attach the canopy to your building.  
These must be purchased separately.

Please note these instructions are given as a guide.

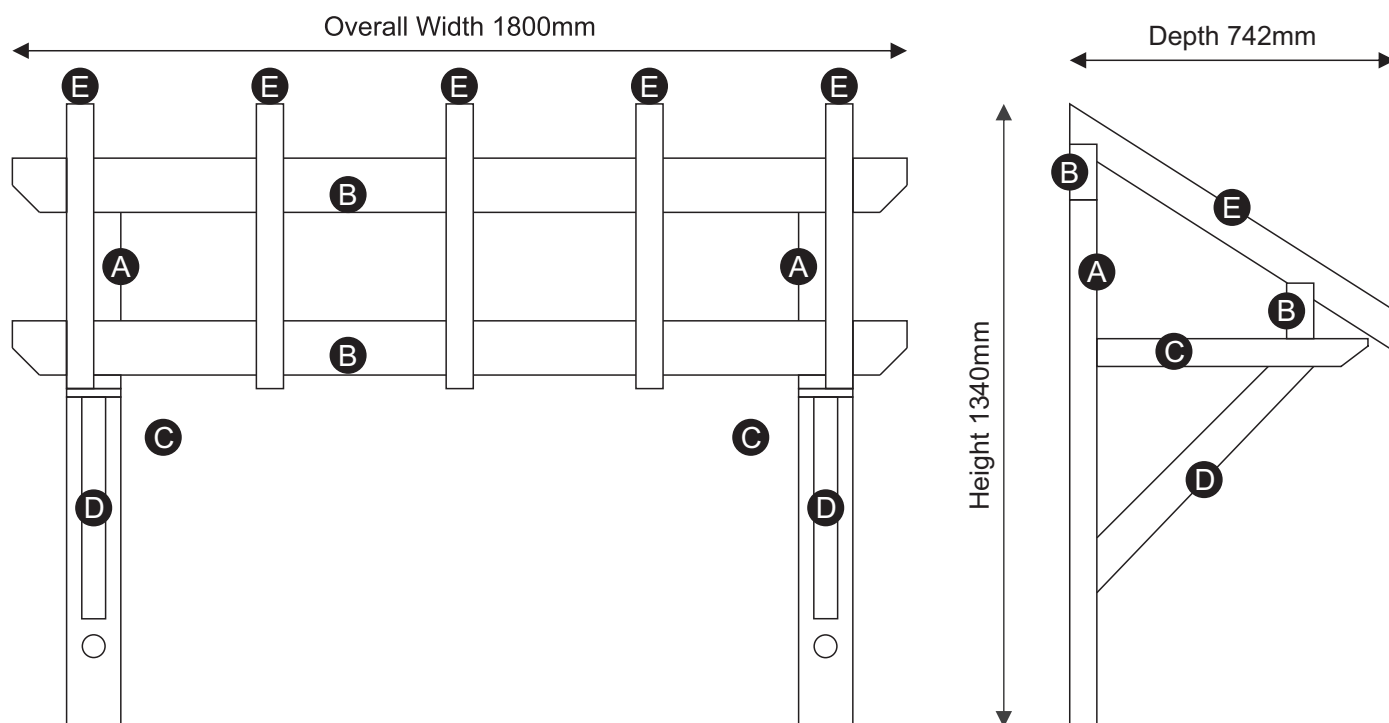

**Don't forget to check your work with a level as you go!**

All images are for illustration only. Please see individual item listing for actual item specifications



01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR


# Porch Canopy Fitting Instructions

## Step 1

Take one **wall support "A"** and attach one of the **horizontal one end angle cut supports "C"** using two 80mm wood screws **"F"**. The distance between the top of the **wall support** and the one end angle cut supports should be 401mm.

Please note - top and bottom **wall support "A"** has a round wall fixing cut out.


(Fixings not included to attach to the wall)

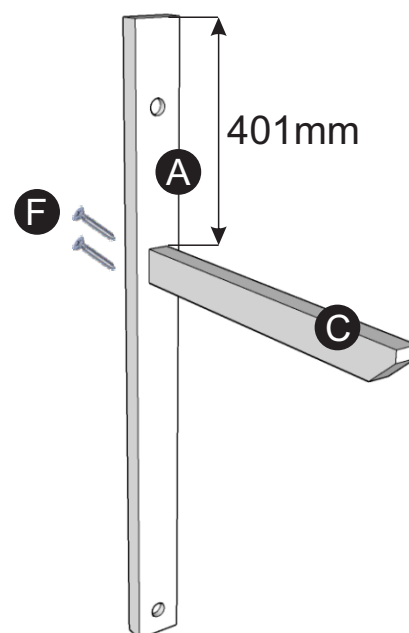

## Step 2

Now place one of the **both end angle cut supports "D"** in-between the connected timbers from step one. This is to brace the **horizontal support "C"**.

Once both supports of the **both angle cut ends "D"** are flush with both of the timbers, fasten into place using one 100mm wood screw **"G"** on the top and 80mm wood screw **"F"** at the bottom.

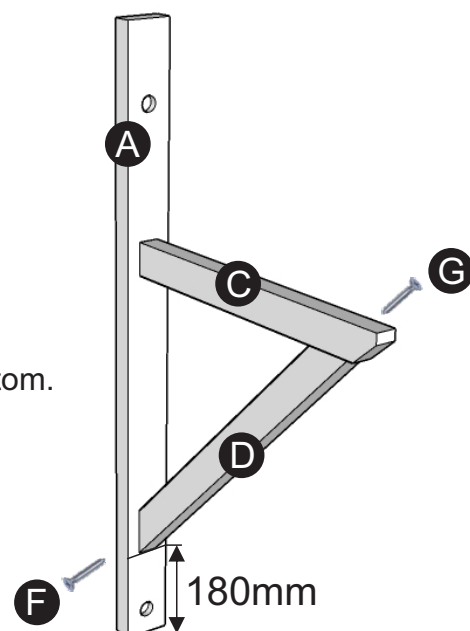

**Don't forget to check your work with a level as you go!**

All images are for illustration only. Please see individual item listing for actual item specifications




01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR


# Porch Canopy Fitting Instructions

## Step 3

Repeat steps one and two to give you two assembled **wall supports**

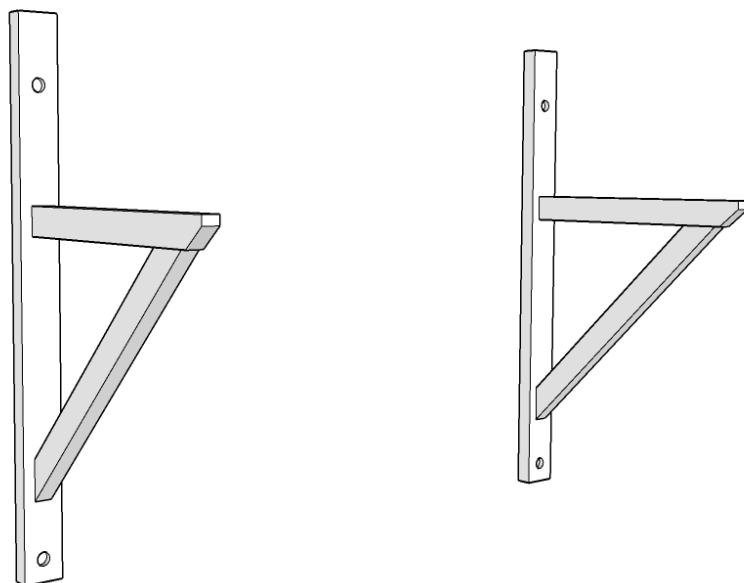

Fasten one horizontal **roof support "B"** to the top of the **two wall supports "A"** with a distance of 1475mm between each wall support. Use 100mm wood screws **"G"** to secure each side.

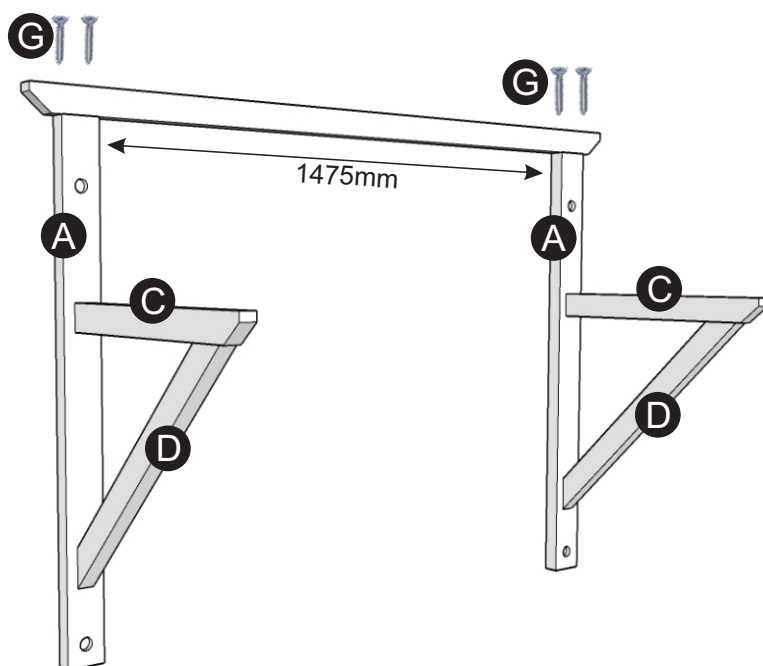

**Don't forget to check your work with a level as you go!**

All images are for illustration only. Please see individual item listing for actual item specifications





01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR

# Porch Canopy Fitting Instructions

## Step 4

Using the second horizontal **roof support "B"**, secure this 100mm from the end of the horizontal one **end angle cut support "C"** as indicated on the diagram to the right. Mirror this step for the other end.

Use once 100mm wood screw **"G"** to secure each side.

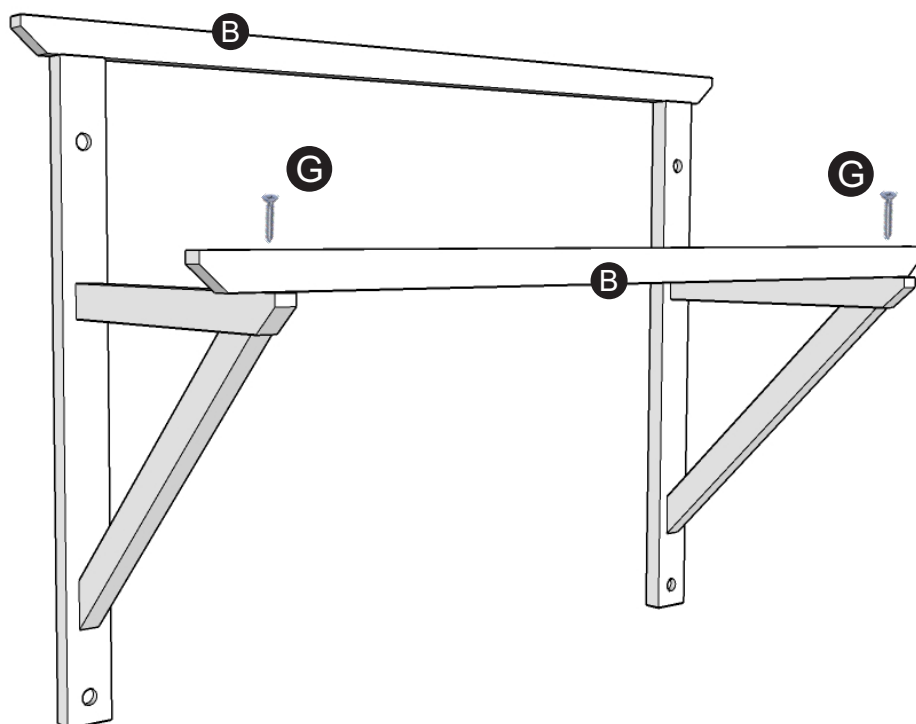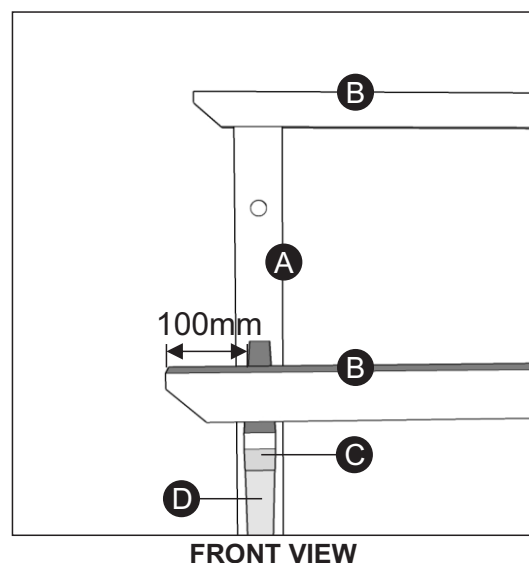

**Don't forget to check your work with a level as you go!**

All images are for illustration only. Please see individual item listing for actual item specifications



01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR


# Porch Canopy Fitting Instructions

## Step 5

Place one of the **angle cut top rafters** “E” aligning with **wall supports** “C” and “D”.

Drive one at the top and one at the bottom 80mm wood screws “F” through the **rafter** “E” and secure it to the **horizontal roof support** “B”

Repeat this for the opposite side, aligning with wall supports.

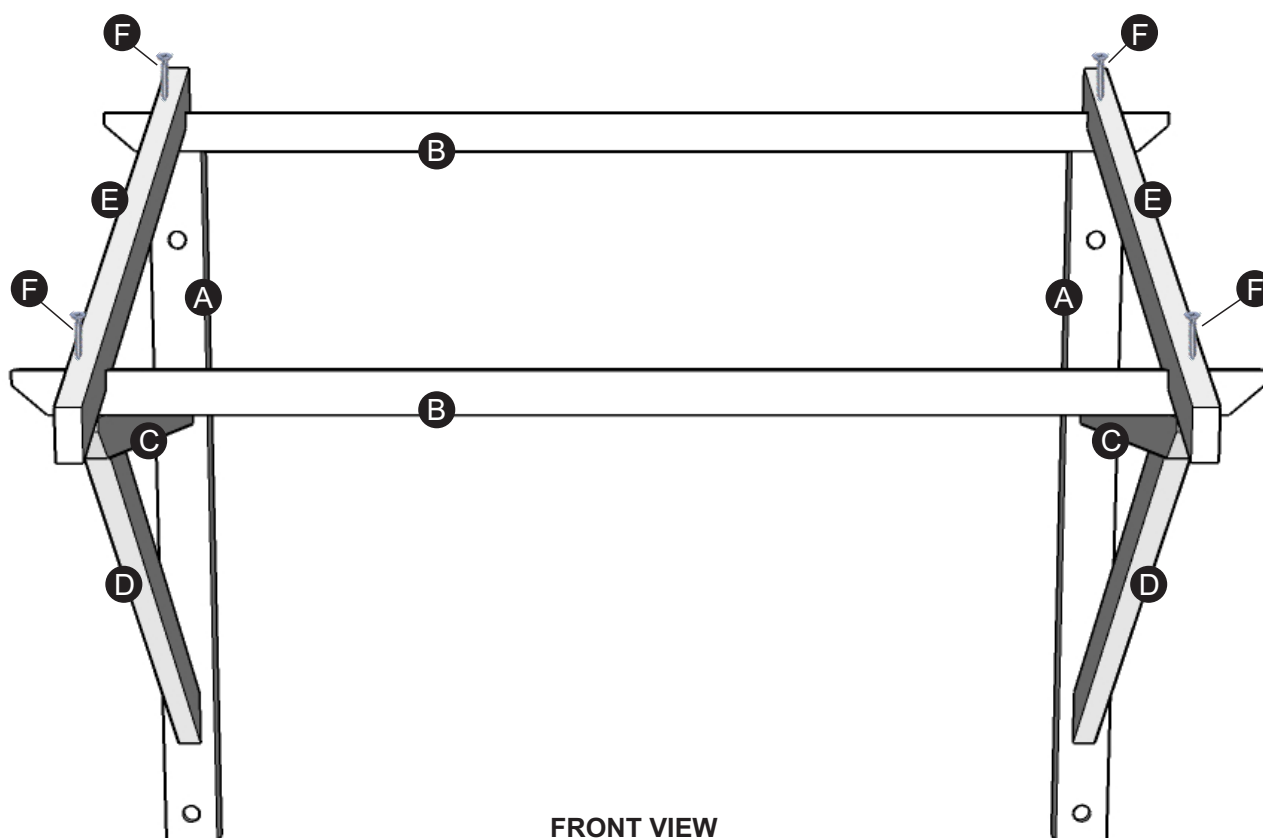

**Don't forget to check your work with a level as you go!**

All images are for illustration only. Please see individual item listing for actual item specifications




01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR

# Porch Canopy Fitting Instructions


## Step 6

Fix one **angle cut top rafter "E"** central between the two rafters secured at either end of the canopy done in Step 5 two using 80mm wood screws **"F"** in to each **horizontal roof support "B"**

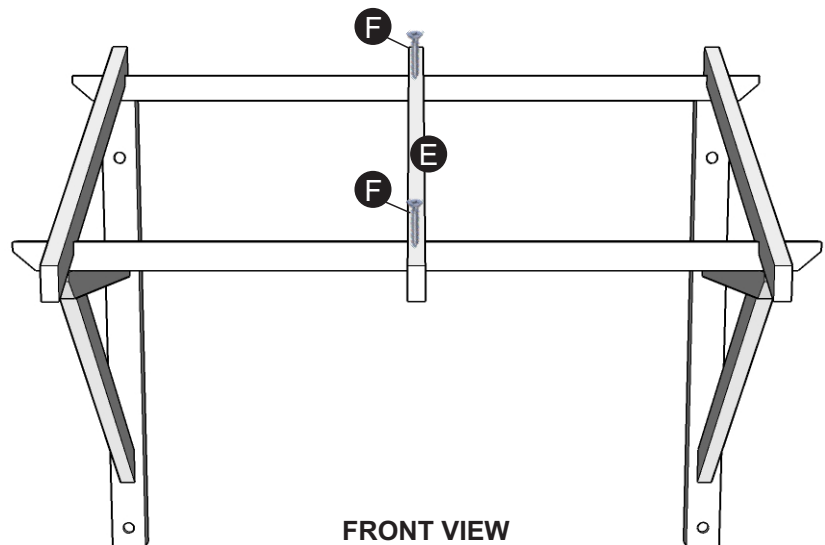

## Step 7

Taking the last two **angle cut top rafters "E"**, fix these central between each outer top rafters and the central top rafter using two 80mm wood screws **"F"**

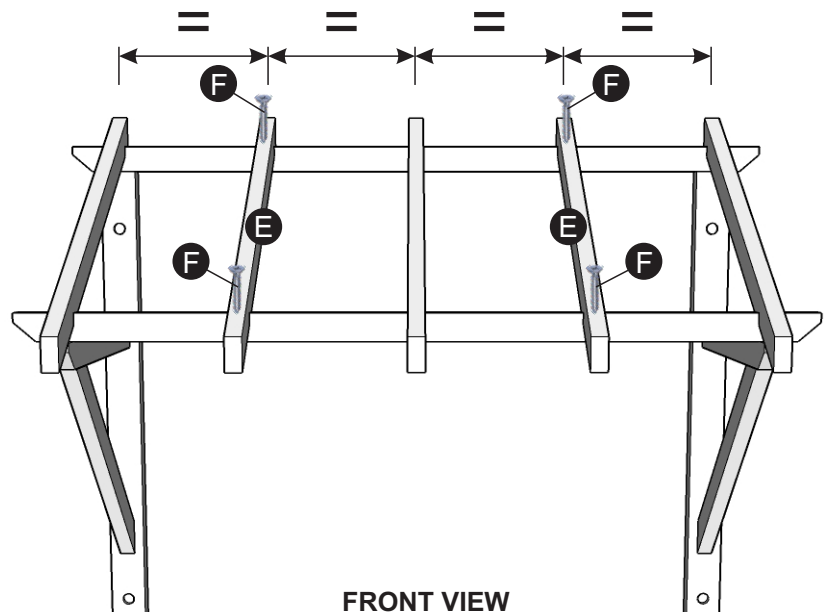

**Don't forget to check your work with a level as you go!**


All images are for illustration only. Please see individual item listing for actual item specifications



01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR

# Porch Canopy Fitting Instructions

## FINISH

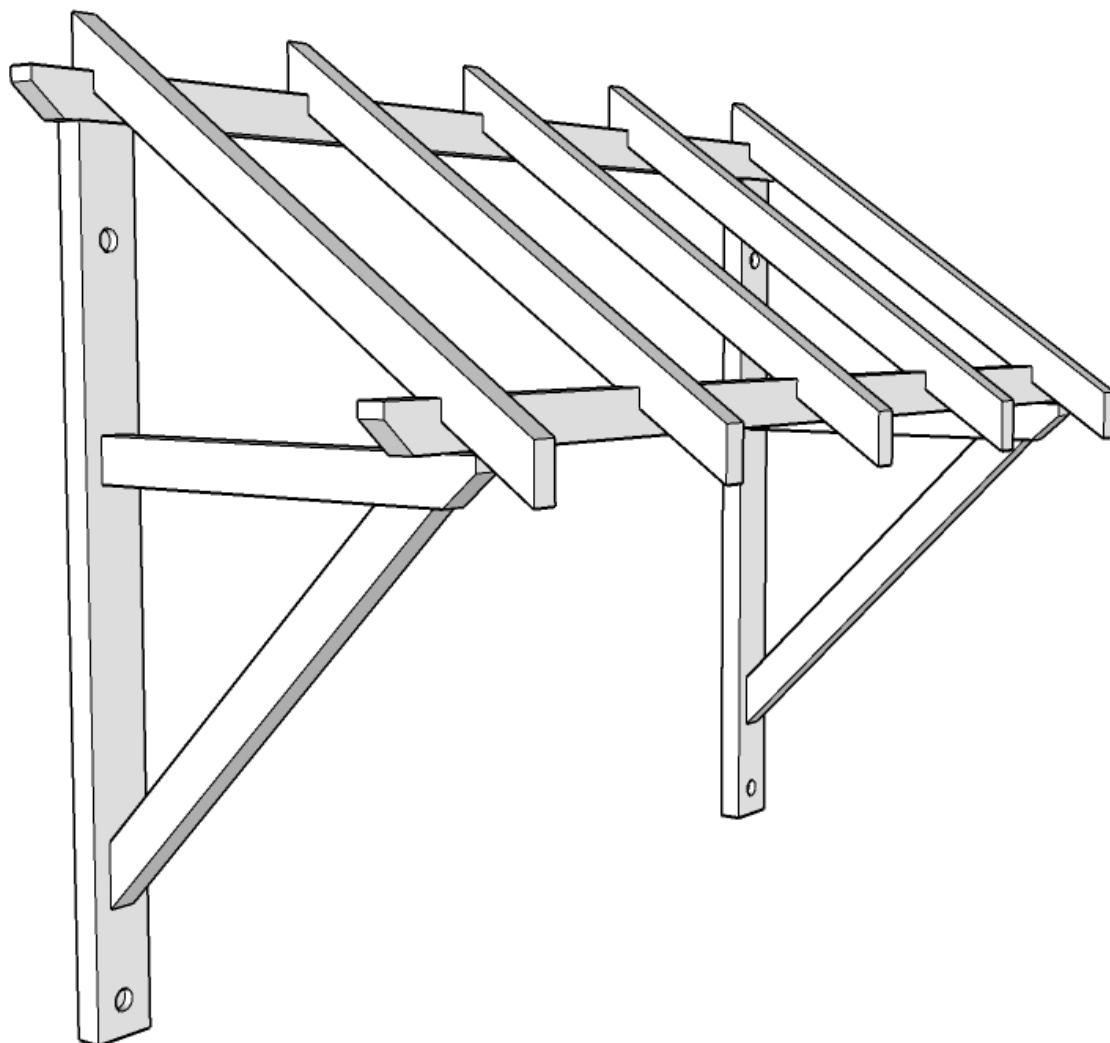

**Enjoy your newly built Flat Roof Porch Canopy!**

All images are for illustration only. Please see individual item listing for actual item specifications



01945 410950 support@arborgardensolutions.co.uk  
<https://www.arborgardensolutions.co.uk>  
Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE13 4NR