

Generic build instructions – Workbench with drawers

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components. If for any reason you need assistance, you can find our contact details on the top of page of these instructions.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

You can check our **YouTube channel** for assemble video, click on the link below:

[Workbench with drawers](#)

Package contents

1x Tabletop
1x Back panel (for versions with back panel)
2x Sets of legs
2x Middle braces for 7ft and 8ft versions **OR**
1x Middle braces for 5ft and 6ft versions
Bundle with drawer parts

Tools required

Electric screwdriver (No.2 Pozi bit) or
Screwdriver



Step 1



Lay the top upside down on a flat even surface.

Step 1.1




Place leg in position as shown. Ensure the leg is pushed into the corner.

Step 1.2




Secure with the supplied screws use pre-drilled guide holes.

Step 1.3

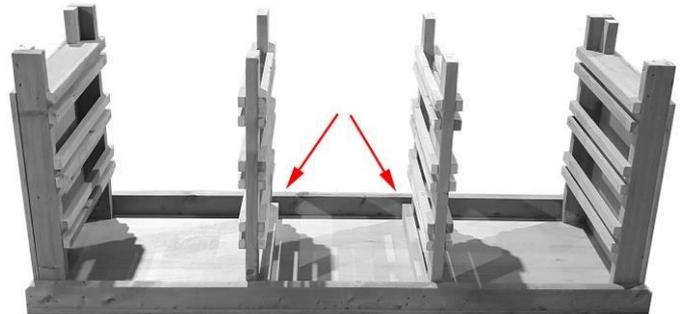

Place both middle braces and last leg into position. Ensure that middle braces are on the outer side of the table middle braces, also push all parts flush with tabletop support and secure into position as shown in the step 1.2 **(for 5ft/6ft version workbenches there will be only one middle brace) – For 3ft version there will be no middle brace just 2x sets of legs.**

Step 2

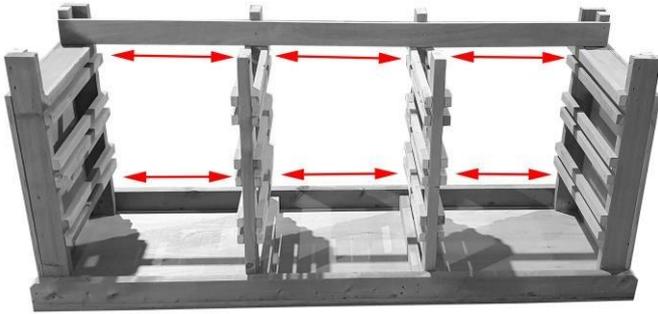

Place front-bottom panel towards you and secure with provided golden screws. **Make sure that distance for drawers are evenly spaced out.**

Step 3



Flip workbench face down. Your front-bottom panel should be facing floor.

Step 4




Now, secure back panel into place with provided screws.

Step 5



At this stage, your workbench should look like this. Now, proceed to drawer assembly, please check separate build instructions at the bottom of the page.

Step 6

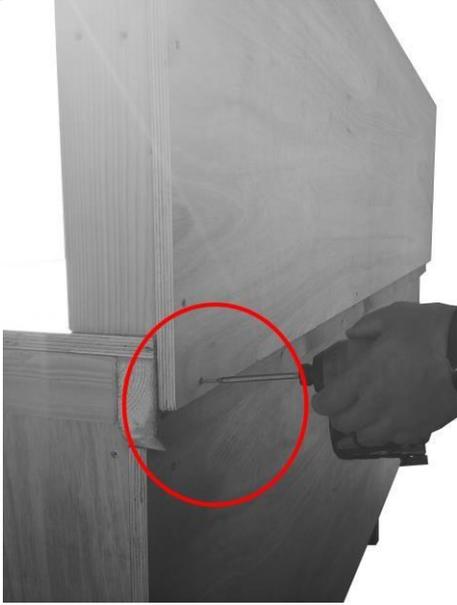

If you chose workbench with back panel, please put into place as shown in the picture and secure it with golden screws from the back.


Drawer assembly

Step 1



Take all parts for the drawers and arrange as showed in the picture.

Step 1.1

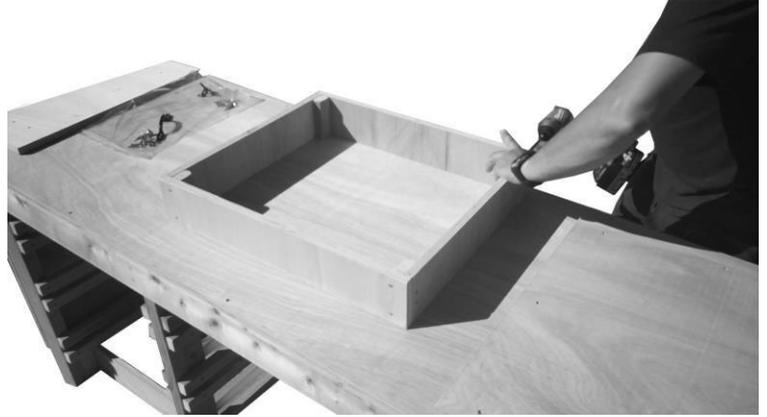

Secure sides with golden screws using pre-drilled guide holes. Make sure that all panels are flush with each other.

Step 1.2



Put base as shown in the picture and use two provided battens from each side to get correct distance from each end and secure with provided screws.

Step 1.3



Now, flip your drawer base down and place one batten at the back and one at the front to raise the drawer.

Step 1.4



Place drawer front panel and make sure it is even spaced out on both sides. Secure with provided screws. **Repeat steps 1 to 1.4 to complete rest of the drawers.**

Your workbench is now completed!

We hope that you found your product quick and easy to assemble but if not, remember you can always check our YouTube channel for assembly video – **just type into YouTube search “Tool Cabinet Wooden Workbench” Or press on the link below:**

<https://www.youtube.com/watch?v=RaEpSI-2DFA>

Or if you require further assistance or have any questions you can contact us via details above.