

## Generic build instructions – workbench with drawers

Before you commence the assembly process, we recommend that you read these instructions thoroughly beforehand to familiarize yourself with the assembly process and to also check that you have the correct components.

We highly recommend that any assembly is carried out on a flat, level surface if possible and that you use another person to assist you if necessary.

You can check our **YouTube channel** for assemble video, click on the link below:

[Workbench with drawers assembly video](#)

### Package contents

1x Tabletop  
2x Set of legs  
1x Middle drawer brace (2x for three drawer version)  
1x Shelf  
1x Back panel (for version with back panel)  
65mm screws  
40mm golden screws

### Tools required

Electric screwdriver (No.2 Pozi bit) or  
Screwdriver



**Step 1**

Lay the top upside down and place a leg in position as shown. Ensure the leg is pushed into the corner and secure with the supplied screws use pre-drilled guide holes.

**Step 2**

For middle braces position will be marked with pencil. (7ft and 8ft versions have 2 middle braces for drawers)

**Step 3**

Ensure the brace is pushed flush with table top support and secure into place. (repeat this step for 7ft/8ft workbenches)

**Step 4**

Place table back on its feet. Slide the bottom shelf into position. Keep the shelf straight, parallel to the table, centralize and secure with provided golden screws.

### Step 5



Now secure back panel into place with provided Golden screws.

### Step 6




At this stage your workbench should look like this, now put drawers into place.

### Step 6.2




If you chose workbench with back panel, please put into place as shown in the picture and secure it with golden screws from the back.

### Step 7

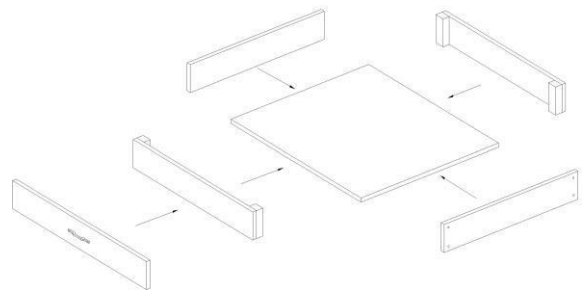


Take all parts for the drawers and arrange as showed in the picture.

## Step 8

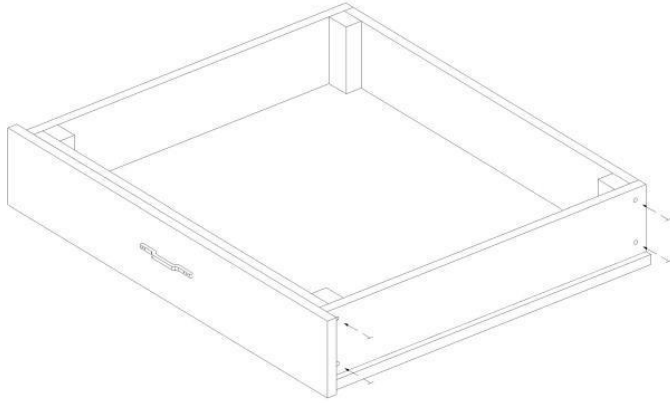


Secure sides with golden screws using pre-drilled guide holes. Make sure that all panels are flush with each other.

## Step 9

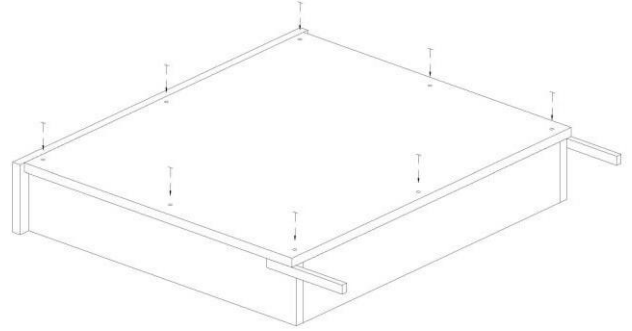


Put base as shown in the picture and use two provided battens from each side to get correct distance from each end.

## Step 10

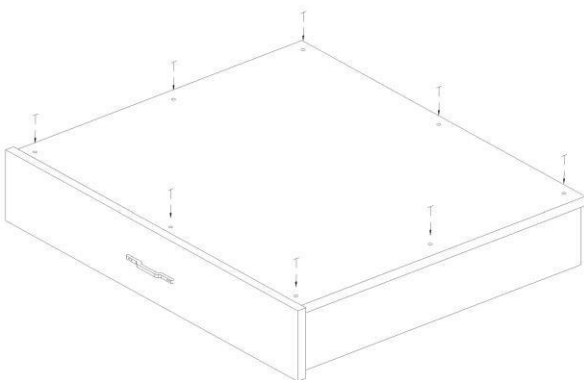

Finally, secure base with golden screws using pre-drilled guide holes

## Step 11

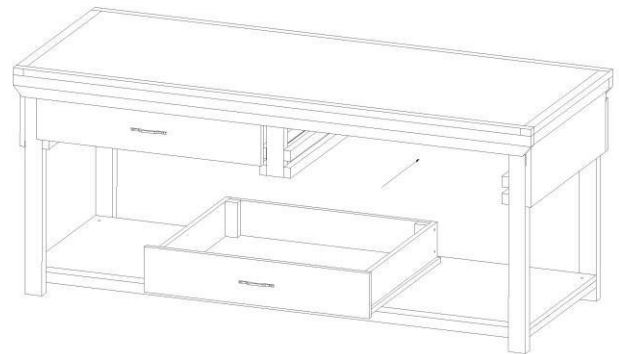

Put shelves into positions.



01945 410950

[support@arborgardensolutions.co.uk](mailto:support@arborgardensolutions.co.uk)

<http://www.arborgardensolutions.co.uk>

Trading address: Unit 11, Cattle Dyke, Wisbech, England, PE1 34NR

### **Your workbench is now completed!**

We hope that you found your product quick and easy to assemble but if not and you require further assistance or have any questions you can contact us via details above.

Also, you can check our **YouTube channel** for assemble videos, click on the link below:

<https://youtu.be/z6JIRI2apsc>

Or

Type in YouTube search box Arbor Garden Solutions.